


3400

SONITROL

***Advantage
3000
Series
Guidebook***

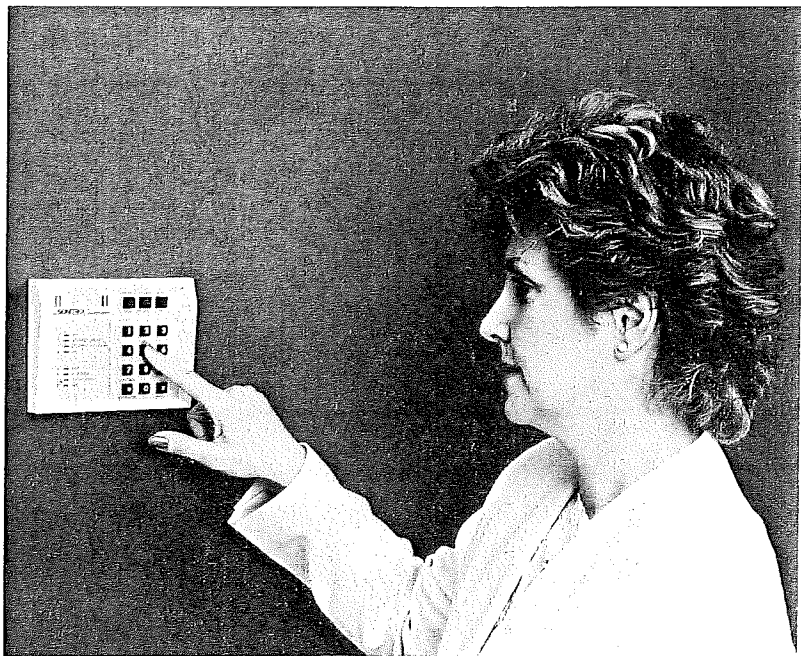

Turning Your System On

Before you begin, the OFF, SYSTEM READY and AC POWER lights should be illuminated.*
 Note: You can also arm your system from the Occupied Security Level.

4

WAIT light illuminates briefly.
 WAIT light turns off.
 ON light illuminates.
 SYSTEM IS ON.

OCCUPIED OCCUPIED AUTO

DELAY NO DELAY ON

SONITROL

1	2	3
4	5	6
7	8	9
SONITROL	0	#
OPERATOR		ENTER

1 Enter your access code.
If you have Quick Arm feature, skip this step.

2 Press AUTO ON.

3 Press ENTER.

Keypad will begin to "beep" slowly. Leave premises immediately through the designated Entry/Exit door.

*Refer to Page 3 for instructions.

Identifying Problems When Turning Your System On

Keypad Display	Explanation	Procedure
<ul style="list-style-type: none"> SYSTEM READY light is off. 	<ul style="list-style-type: none"> A window, door, etc. may be open, preventing system activation. 	<ol style="list-style-type: none"> Check all doors, windows and auxiliary sensors to ensure that they are closed/operational. See Page 9, "Identifying Alarm Sensors." After correcting the situation, SYSTEM READY light will illuminate. You may proceed with turning your system on. If SYSTEM READY light remains off, contact the Central Station for assistance.

The following situations all require the same procedure — Call your Central Station.

<ul style="list-style-type: none"> Flashing WAIT light. 	<ul style="list-style-type: none"> An invalid access code has been entered several times in succession. <p>The keypad will refuse entries for two (2) minutes.</p>
<ul style="list-style-type: none"> WAIT light turns off, OFF light remains on and keypad begins to "beep". 	<ul style="list-style-type: none"> Indicates a communication problem with the Central Station.
<ul style="list-style-type: none"> WAIT and SYSTEM READY lights turn off and OFF light remains on. 	<ul style="list-style-type: none"> Indicates total audio sensor failure.



Call your local Central Station immediately.

Business No.: _____

24 Hour No.: _____

Turning Your System Off

Upon your entry through designated Entry/Exit door, keypad will "beep", reminding you to turn the system off. *Note:* Your system can be turned off from the Occupied Security Levels.

3 WAIT light illuminates briefly. WAIT light turns off. OFF light illuminates. SYSTEM IS OFF.

1 Enter your access code.

2 Press ENTER.

*Refer to Page 5 for instructions.

Identifying Problems When Turning Your System Off

Keypad Display	Explanation	Procedure
<ul style="list-style-type: none"> • SYSTEM READY light is blinking before the system is turned off. 	<ul style="list-style-type: none"> • There is, or has been, an alarm condition (open door, window, etc.) since the system was turned on. 	<ul style="list-style-type: none"> • Leave the premises immediately and call the Central Station.
<ul style="list-style-type: none"> • Flashing WAIT light. 	<ul style="list-style-type: none"> • An invalid access code has been entered several times in succession. <p>The keypad will refuse entries for two (2) minutes.</p>	<ul style="list-style-type: none"> • Call your local Central Station immediately.



Business No.: _____

24 Hour No.: _____

Occupied Security Levels — Occupied Delay

Provides protection in pre-defined areas of your premises (e.g. doors, windows, etc.), but occupants have normal Entry/Exit delay periods to enter or leave through the designated door before causing an alarm.

1 Enter your access code.
*If you have Quick Arm feature, skip this step.**

2 Press OCCUPIED DELAY.

3 Press ENTER.

4 OCCUPIED DELAY light will illuminate.

*If the ON light is on, you **must** enter your access code.

Occupied Security Levels — Occupied No Delay

Provides protection in pre-defined areas of your premises (e.g. doors, windows, etc.). Violating these areas will cause an immediate alarm.

1 Enter your access code.
*If you have Quick Arm feature, skip this step.**

2 Press OCCUPIED NO DELAY.

3 Press ENTER.

4 OCCUPIED NO DELAY light will illuminate.

*If the ON light is on, you **must** enter access code.


Other Keypad Functions

Emergency — sends a request for help to Central Station. It is to be used in cases of forcible restraint or emergency. The Operator will immediately dispatch police. No indication of this alarm will be evident at the premises.

Option A will send alarm and change system status from ON to OFF.
Option B does not change the system status.

Call Operator — tests the system and reports results to Central Station. Use when assistance is required. (You may hear audible "beeps" from system components.) The Central Station will call you immediately.

- ① Enter your access code. (If you have Quick Help feature, skip this step.)
- ② Press SONITROL OPERATOR.
- ③ Press ENTER.

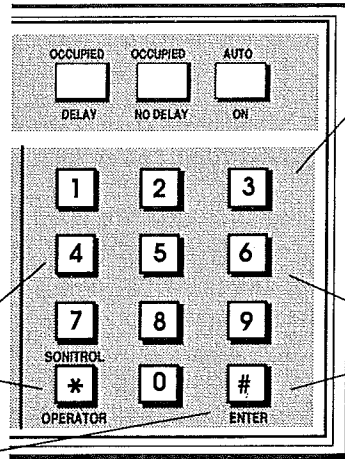

Option A: Duress Code + ENTER.

Option B: "911" + ENTER.

Cancel — to cancel a false alarm or to silence keypad or siren.

- ① Enter your access code.
- ② Press ENTER.

Identifying Alarm Sensors

To determine the source of an alarm or the reason why the system will not turn ON:

Press the * key then hold down the 1 key.

LED #	Location
1	_____
2	_____
3	_____
4	_____
5	_____
6	_____
7	_____
8	_____

Press the * key then hold down the 2 key.

LED #	Location
1	_____
2	_____
3	_____
4	_____
5	_____
6	_____
7	_____
8	Tamper