
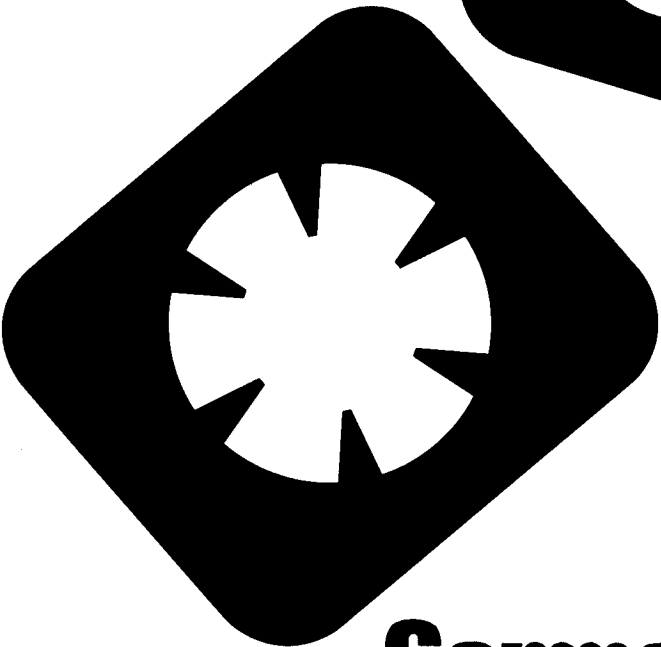


**SECURITY  
SYSTEM  
OWNER'S  
MANUAL**

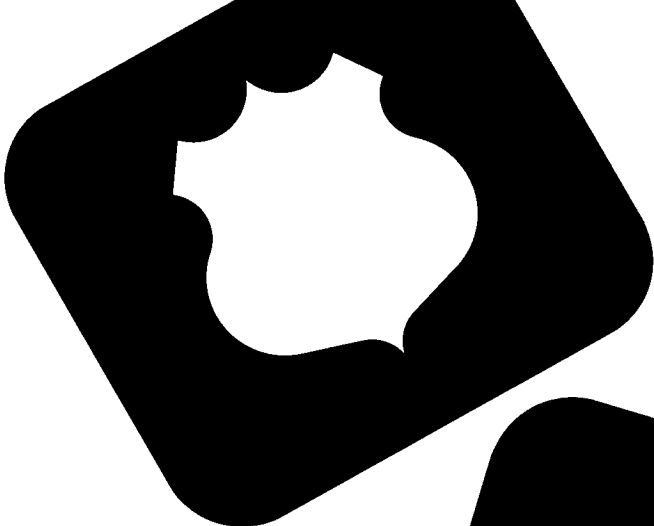


**Commander**  

---

**2000**

# **Commander<sup>®</sup>** **2000**

Security System  
Owner's Manual

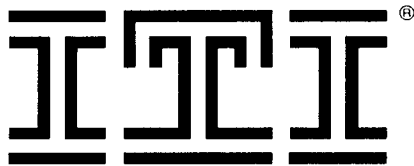

Interactive Technologies Inc.  
2266 North 2nd Street  
North St. Paul, MN 55109

## FCC Notices

### FCC Part 15 Information to the User

Changes or modifications not expressly approved by Interactive Technologies, Inc. can void the user's authority to operate the equipment.

### FCC Part 15 Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the affected equipment and the CPU receiver to separate outlets, on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

Commander and ITI are registered trademarks of Interactive Technologies, Inc.

Energizer is a registered trademark of Eveready, Inc.

Ultralife is a registered trademark of Ultralife Batteries, Inc.

X-10 is a registered trademark of X-10 (USA) Inc.

For reprints order: 46-585-01-ITI Rev. D

Text 46-701-01-ITI Rev. D

Copyright ITI 1995



# TABLE OF CONTENTS

## SECTION 1–

INTRODUCTION . . . . .	1
How the System Works . . . . .	1
Typical System Components . . . . .	1
Panel . . . . .	4
Wireless Sensors . . . . .	5
Wireless Touchpads . . . . .	5
Sirens . . . . .	5

## SECTION 2–

HOW THE SYSTEM COMMUNICATES TO YOU . . . . .	7
Panel Indicator Lights . . . . .	7
Alarm Sounds . . . . .	8
System Status Beeps . . . . .	9
Voice Messages . . . . .	9

## SECTION 3–

BASIC SYSTEM OPERATIONS . . . . .	11
Using Access Codes . . . . .	11
Primary Access Code . . . . .	11
Temporary Access Code . . . . .	12
Secondary Access Codes . . . . .	12
Entering and Exiting Premises . . . . .	12
Entering the Premises . . . . .	13
Exiting the Premises . . . . .	13
Arming and Disarming Your System . . . . .	14
Turning System OFF . . . . .	14
Turning System ON (STAY and AWAY) . . . . .	16
Activating Emergency Alarms . . . . .	17
Police, Fire, and Auxiliary/Medical Alarms . . . . .	17
Silent Duress Alarm . . . . .	19

SECTION 4-	
ADVANCED SYSTEM OPERATIONS . . . . .	21
Arming with No Alarm Delay (NO DELAY) . . . . .	21
Bypassing Normally Armed Sensors (BYPASS) . . . . .	22
Using the Chime Feature (CHIME) . . . . .	23
Controlling Lights (LIGHTS) . . . . .	24
Panel Light Control . . . . .	24
User Light Control . . . . .	24
Checking the System Status (STATUS) . . . . .	25
Checking for Alarms . . . . .	26
Adjusting Panel Speaker Volume . . . . .	27
SECTION 5-	
MAINTAINING YOUR SYSTEM . . . . .	29
Required System Tests . . . . .	29
Replacing Panel Backup Batteries . . . . .	31
Replacing Smoke Sensor Batteries . . . . .	34
Replacing Other Sensor Batteries . . . . .	34
SECTION 6-	
TROUBLESHOOTING YOUR SYSTEM . . . . .	35
SECTION 7-	
PLANNING FOR EMERGENCIES . . . . .	39
Floor Plan . . . . .	41
APPENDIX A -	
ALARM SYSTEM NOTICE . . . . .	43
GLOSSARY . . . . .	45
INDEX . . . . .	47

# SECTION 1— INTRODUCTION

Congratulations on your selection of this security system! This system is designed to provide you with years of dependable service.

This manual includes step-by-step instructions for the proper use of your security system. Read this manual before you begin using your system.

## HOW THE SYSTEM WORKS

This security system is a wireless, supervised system. Wireless means that most sensors use radio waves instead of wires to communicate with the Control Panel (Panel). With a supervised system, the wireless sensors communicate with the Panel on a regular basis. There are three features that are unique to supervised security systems:

### ■ Automatic Sensor Communication Testing

The system receives a signal from each sensor every 64 minutes. This signal tracks sensor communication.

### ■ User Friendly Arming

The system tracks the status of each sensor and sounds protest beeps if sensors are open or have a trouble condition when you attempt to arm. If you ignore these protest beeps, the Panel automatically bypasses the protesting sensor(s) and arms the system to the desired level.

### ■ Sensor Battery Monitoring

The system notifies you of sensors with low batteries.


These three features help ensure that your system handles alarm conditions in the appropriate manner.

## TYPICAL SYSTEM COMPONENTS


Figure 1 shows a typical system configuration, highlighting the devices that communicate with the Panel and the devices that the Panel controls in response to system conditions.

A description of typical system components begins on page 4.

THESE DEVICES REPORT  
TO THE PANEL.

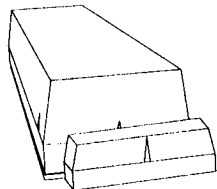


DOOR/WINDOW SENSOR  
ITI PART NO. 60-362

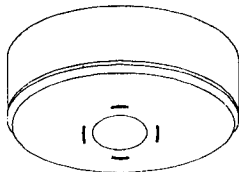


SOUND SENSOR\*  
ITI PART NO. 60-459




TOUCHPAD  
ITI PART NO. 60-348

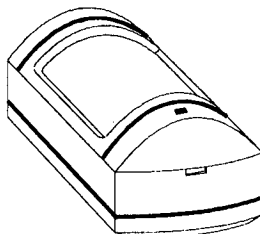

PIR MOTION DETECTOR  
ITI PART NO. 60-511

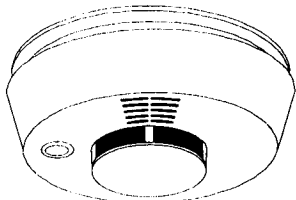

SMOKE SENSOR  
ITI PART NO. 60-506

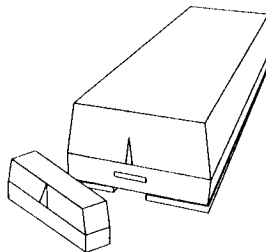

SHOCK SENSOR\*  
ITI PART NO. 60-461

\*NOT INVESTIGATED BY UL.

Figure 1. Typical System Components





# PANEL

The Panel is your security system's most vital component (see Figure 2). It performs four main functions:

- Lets you operate the system and set system options.
- Provides you with feedback from the system through indicator lights, voice messages, and status and alarm beeps.
- Receives signals from wireless sensors and wireless touchpads throughout the premises.
- Responds to alarm and trouble conditions by reporting with voice and alarm sounds; controlling output devices, including sirens and X-10<sup>®</sup> Lamp Modules; and if necessary, contacting your monitoring service over the phone line.

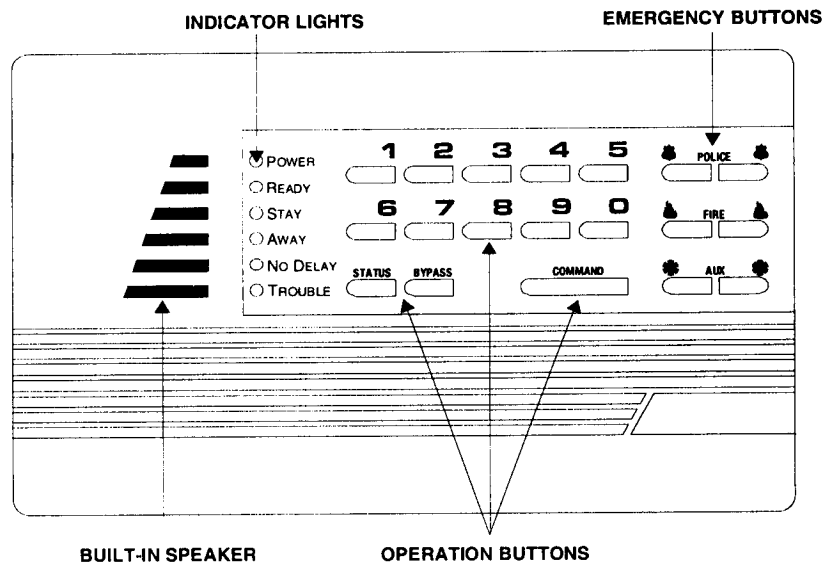


Figure 2. Panel Lights, Buttons, and Speaker

# WIRELESS SENSORS

Wireless sensors are your security system's detection devices. They perform two functions:

- Notify the Panel if a change in the normal state of a sensor occurs. For example, if the system is armed and you open a protected door, the sensor reports to the Panel and an intrusion siren sounds.
- Check in with the Panel approximately every hour to indicate proper operation. If a sensor fails to report to the Panel within a specified time (programmed by your security consultant), a communication failure is reported to the monitoring service and the system sounds trouble beeps (see Section 5, "Troubleshooting Your System").

# WIRELESS TOUCHPADS

Wireless touchpads let you operate the system, inside or outside the premises. A wireless touchpad's range will vary, depending on premises conditions and the location of the Panel in respect to the wireless touchpad.

**Note:** The Energy Saver option, shown on button 5 of the Handheld and Wall-Mount Wireless Touchpads, is not available with this system.

# SIRENS

Sirens create two types of sounds, which alert you to the following:

- Alarm conditions
- System status



# SECTION 2-

## HOW THE SYSTEM COMMUNICATES TO YOU

This section describes how your security system uses indicator lights, alarm sounds, status beeps, and voice messages to communicate system information to you.

### PANEL INDICATOR LIGHTS

The indicator lights on the Panel provide system status information. Table 1 describes what each light means.

Table 1. Panel Indicator Lights

Indicator Light †	ON ‡	OFF	Flashing Δ
POWER	AC power is on, and backup batteries are good.	AC power is off, and backup batteries are good.	AC power is on, and backup batteries are bad.
READY	System is ready to arm.	Perimeter or interior sensors are open, not ready to arm.	Perimeter sensors are ready to arm, but interior sensors are open and system can only arm to level 2.
STAY	System is armed to level 2.	---	System is armed to level 2, with sensors bypassed.
AWAY	System is armed to level 3.	---	System is armed to level 3, with sensors bypassed.
NO DELAY	Delay is off.	Delay is on.	---
TROUBLE	---	System operating normally.	System is not operating properly. Press STATUS for a voice message of the problem.

† All lights scrolling indicates either a phone test or sensor test is on, or an armed sensor is activated. Press STATUS for a description of the condition.

‡ All lights on steady indicates that the Panel has lost its memory. Contact your security consultant immediately.

Δ All lights flashing indicates that the system is in program mode. Contact your security consultant immediately.

# ALARM SOUNDS

Exterior and interior sirens make three alarm sounds on the premises (see Table 2). Fire alarms take precedence over auxiliary/medical alarms, which in turn take precedence over police alarms.

**Table 2. Siren Alarm Sounds**

Siren Type	Description of Siren Sounds	
Fire Alarm	Steady tone	—————
Police Alarm	Slow ON-OFF-ON-OFF	— — — —
Auxiliary/Medical Alarm*	Fast ON-OFF-ON-OFF	- - - -

\* Interior sirens only

# SYSTEM STATUS BEEPS

The Panel speaker and interior sirens provide system feedback by sounding status beeps. Table 3 describes the status beeps you may hear from your Panel.

**Table 3. Understanding Status Beeps**

Type	Pattern	Indicates
Arming Level	1 beep	System disarmed to level 1.
	2 beeps	System armed to level 2, or armed to level 2 and exit delay has expired.
	3 beeps	System armed to level 3, or armed to level 3 and exit delay has expired.
Entry Delay	2-beep continuous sequence *	System armed to level 2 and entry delay is in progress.
	3-beep continuous sequence *	System armed to level 3 and entry delay is in progress.
Chime	2-beep (1 long, 1 short)	System disarmed to level 1 with chime feature on while an exterior sensor opened.
Protest	2-beep continuous sequence (1 long, 1 short)	<ol style="list-style-type: none"> <li>1. System disarmed after an alarm from a wireless touchpad, including Keychain Touchpad.</li> <li>2. Attempt to arm to level 2 while the READY light is OFF, indicating an exterior sensor is open.</li> <li>3. Attempt to arm to level 3 while the READY light is OFF (indicating an exterior sensor is open), or flashing (indicating an interior sensor is open).</li> </ol>
Trouble	6-beep sequence, once every minute	<ol style="list-style-type: none"> <li>1. System has AC power failure.</li> <li>2. System has low sensor battery.</li> <li>3. System has failure to communicate.</li> <li>4. System has sensor failure.</li> <li>5. System has low battery.</li> <li>6. System's memory is clear.</li> </ol> Press STATUS for a voice message of the problem (see Section 5, "Troubleshooting Your System"), or contact your security consultant.

\* Entry delay beeps sound at a more rapid pace if an alarm has occurred. Exit the premises immediately and call for emergency help from a neighbor's phone.

## VOICE MESSAGES

The Panel speaker announces voice messages of system and sensor information. These messages are described as they are encountered throughout this manual.



# SECTION 3— BASIC SYSTEM OPERATIONS

This section describes how to perform the basic system operations, including: using access codes, entering and exiting the premises, turning the system on and off, and activating emergency alarms.

## USING ACCESS CODES

An access code is a four-digit number that lets you operate the system and prevents unauthorized use of the system. An access code is required for most system commands.

**WARNING:** Select access codes you and other system users will remember. If you forget your primary access code, contact your security consultant.

## PRIMARY ACCESS CODE

The primary access code allows you to perform all system commands. The system allows you to have one primary access code. The default primary access code is 1234. You should change your primary access code from the default to a number that you can remember.

### ■ To change your primary access code:

Enter primary ACCESS CODE + STATUS + 8 + new primary ACCESS CODE.

The Panel announces, *[new primary access code] OK*, indicating that the primary access code was changed.

**Note:** Because the first two digits of your duress code are the same as the first two digits of the primary access code, when you change the primary access code, the duress code also changes (see “Silent Duress Alarm” on page 20).

**Note:** If your temporary access code was previously disabled, it is no longer disabled when you change your primary access code. It exists as your *old* primary access code. You must disable it again using your *new* primary access code.



# TEMPORARY ACCESS CODE

The temporary access code allows you to perform all system commands, except changing access codes and bypassing sensors directly. The system allows you to have one temporary access code. You might give the temporary access code to a babysitter or other service personnel.

## ■ To add or change the temporary access code:

Enter primary ACCESS CODE + STATUS + 7 + temporary ACCESS CODE.

The Panel announces, [*temporary access code*] OK, indicating that the temporary access code was changed.

## ■ To disable the temporary access code:

Enter primary ACCESS CODE + STATUS + 7 + primary ACCESS CODE.

The Panel announces, [*primary access code*] OK, indicating that the temporary access code was deleted.

**Note:** If your temporary access code was previously disabled, it is no longer disabled when you change your primary access code. It exists as your *old* primary access code. You must disable it again, using your *new* primary access code.

# SECONDARY ACCESS CODES

Secondary access codes allow you to perform all system commands, except changing access codes and bypassing sensors directly. You can have up to four secondary access codes. The secondary access codes can be used in the same way as the temporary access code, except the secondary access codes can only be set and changed by your security consultant.

# ENTERING AND EXITING PREMISES

While the system is armed, delay times let you enter or exit through designated delay doors without causing an alarm. A delay door is any door that is assigned a delay time. If you activate any sensor before you open the delay door, an instant alarm sounds. When entering the armed premises, you must disarm the system within the entry delay time. After arming the system, you must exit the premises before the exit delay time expires.

There are two types of delays, standard and extended. Your security consultant will set up and explain your system's delays. Contact your security consultant to have your delay times changed.

## ENTERING THE PREMISES

To prevent an alarm when entering the armed premises, you must:

- Enter the extended delay door and disarm the system within the extended delay time.

*or--* Enter the standard delay door and disarm the system within the standard entry delay time.

*or--* Enter the extended delay door, then enter the standard delay door and disarm the system within the standard entry delay time or within the time remaining for the extended delay, whichever is less.

**Example:** The extended delay is set to 4 minutes, and the standard entry delay is set to 32 seconds. If you enter the extended delay door and then open the standard delay door after 3 minutes and 50 seconds, you have 10 seconds to disarm the system.

If you enter the extended delay door and open the standard delay door after 2 minutes, the extended delay is canceled and you have 32 seconds to disarm the system.

## EXITING THE PREMISES

To prevent an alarm when exiting the armed premises, you must:

- Exit the standard delay door within the standard exit delay time.

*or--* Exit the extended delay door within the standard exit delay and the remaining extended delay.

**Example:** The standard exit delay is set to 32 seconds, and the extended delay is set to 4 minutes. If you arm your system and exit the standard delay door in 22 seconds, then you must exit the extended delay door within 4 minutes and 10 seconds.

# ARMING AND DISARMING YOUR SYSTEM

This section describes levels of security and how to arm and disarm the system.

## TURNING SYSTEM OFF

1

OFF

Use level 1 (OFF) to turn the system off when entering the premises with the system armed to level 2 or 3 and when canceling an accidental alarm. Level 1 disarms your perimeter and interior sensors. The 24-hour sensors (such as smoke, heat, freeze, emergency buttons, and fire pull stations) always remain armed.

**CAUTION:** Do not enter the premises if you hear sirens. Call for emergency help from a neighbor's phone.

### ■ To disarm the system from the Panel or a touchpad:

1. Enter the premises through a delay door when the system is armed to level 2 or 3.

The Panel and interior sirens sound entry delay beeps for the entire delay or until you disarm the Panel. You must disarm the system before the delay time expires, or an alarm occurs.

**CAUTION:** Exit the premises immediately if the entry delay beeps sound at a more rapid pace. This indicates an alarm has occurred. Call for emergency help from a neighbor's phone.

2. Enter ACCESS CODE + 1.

The AWAY or STAY light turns off, the Panel and interior sirens sound an arming level beep, and the Panel announces, *Alarm system is off*, if you disarmed from the Panel.

**CAUTION:** If you disarm the system before entering the premises, do not enter the premises if you hear protest beeps. This indicates an alarm has occurred. Call for emergency help from a neighbor's phone. For more information on this feature, contact your security consultant.

3. Press STATUS to learn if there are any system problems.

## ■ To disarm the system from a Keychain Touchpad:

1. Enter the premises through a delay door when the system is armed to level 2 or 3.

The Panel and interior sirens sound entry delay beeps for the entire delay or until you disarm the Panel. You must disarm the system before the delay time expires, or an alarm occurs.

**CAUTION: Exit the premises immediately if the entry delay beeps sound at a more rapid pace. This indicates an alarm has occurred. Call for emergency help from a neighbor's phone.**

2. Press the disarm button on the Keychain Touchpad.  
The AWAY or STAY light turns off, the Panel and interior sirens sound an arming level beep.

**Note:** Pressing disarm will not disarm the system if an alarm was generated by simultaneously pressing arm and disarm.

**CAUTION: If you disarm the system before entering the premises, do not enter the premises if you hear protest beeps. This indicates an alarm has occurred. Call for emergency help from a neighbor's phone. For more information on this feature, contact your security consultant.**

3. Press STATUS to learn if there are any system problems.

## ■ To stop an accidental alarm:

1. With the Panel in alarm, enter ACCESS CODE + 1.  
The Panel announces, *Sensor [sensor #] [alarm type] alarm memory. Alarm system is off.*

**Example:** *Sensor 16 intrusion alarm memory. Alarm system is off.* Alarm type may be intrusion, fire, or help.

If the Panel is disarmed before a call is made to the monitoring service (from 8 to 20 seconds), the Panel announces, *Sensor [sensor #] [alarm type] alarm memory. Alarm system is off. Alarm bypassed.*

# TURNING SYSTEM ON (STAY AND AWAY)

Arming the system means you are turning on intrusion detection. Depending on the level you arm to, an alarm occurs if a perimeter or interior sensor is activated.

2

STAY

Use level 2 (STAY) when you want to stay in the premises with perimeter sensors armed. Using level 2, you can also leave the premises through any delay door during the delay time. Level 2 arms all perimeter sensors, including door/window, shock, and glass break sensors, as well as all sensors that are active in level 1 (24-hour sensors).

3

AWAY

Use level 3 (AWAY) when you are leaving the premises and want all sensors armed. Level 3 arms all interior sensors, such as motion sensors, as well as all sensors that are active in levels 1 and 2.

## ■ To arm the system from the Panel or a touchpad:

1. Close all perimeter doors and windows.
2. Check to see that the Panel's READY light is on or flashing.

*or--* If the READY light is not on or flashing, press the STATUS button to learn if there are any system problems.

The system's voice message should provide you with the number of any sensors that are open. After double-checking those sensors, if the READY light is still not on or flashing, refer to "Bypassing Normally Armed Sensors (BYPASS)." You also should contact your security consultant to resolve the problem.

3. From the Panel or a touchpad, enter ACCESS CODE + 2 or ACCESS CODE + 3 to arm to level 2 or 3, respectively.

*or--* Enter COMMAND + 2 or COMMAND + 3, if your system is set up for this capability.

Depending on which level you arm to, the Panel's STAY or AWAY light turns on, the Panel and interior sirens sound arming level beeps at the beginning of the exit delay, and the Panel announces, *Alarm system is on [level 2 or 3]*.

4. Exit the premises within the delay time, if you are leaving.

When the delay time expires, the Panel and interior sirens sound arming level beeps again. If you are still in the premises and want to leave, disarm and rearm the system, or you may cause an accidental alarm.

## ■ To arm the system from a Keychain Touchpad:

1. Close all perimeter doors and windows.
2. Check to see that the Panel's READY light is on or flashing.

*or--* If the READY light is not on or flashing, press STATUS at the Panel or a touchpad to learn if there are any system problems.

The system's voice message should provide you with the number of any sensors that are open. After double-checking those sensors, if the READY light is still not on or flashing, refer to "Bypassing Normally Armed Sensors (BYPASS)." You also should contact your security consultant to resolve the problem.

3. Press arm until the light blinks.

The Panel's STAY or AWAY light turns on, and the Panel and interior sirens sound arming level beeps at the beginning of the exit delay.

 
**Note:** Depending on programming, a Keychain Touchpad may arm your system to the next higher arming level or directly to level 3 NO DELAY.

4. Exit the premises within the delay time, if you are leaving.

When the delay time expires, the Panel and interior sirens sound arming level beeps again. If you are still in the premises and want to leave, disarm and rearm the system to prevent an accidental alarm.

## ACTIVATING EMERGENCY ALARMS

The emergency buttons on the Panel or touchpads allow you to activate the appropriate emergency alarm.

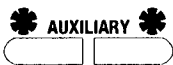

## POLICE, FIRE, AND AUXILIARY / MEDICAL ALARMS

Use the POLICE, FIRE, or AUXILIARY alarm buttons in an emergency.

A police alarm activates interior and exterior sirens and sends a police alarm to your monitoring service. The monitoring service should contact the police.

A fire alarm activates interior and exterior sirens and sends a fire alarm to your monitoring service. The monitoring service should contact the fire department.

An auxiliary/medical alarm activates interior sirens and sends an auxiliary/medical alarm to your monitoring service. The AUXILIARY button can be used to request either auxiliary or medical service, if the monitoring service knows in advance what service to contact in case of an alarm.

The emergency buttons are active in all security levels. The system recognizes the emergency buttons as sensors (see Table 4).

**Table 4. Emergency Button Sensor Numbers**

Emergency Button	Sensor Number
POLICE	81
FIRE	80
AUXILIARY	82

■ **To activate a police, fire, or auxiliary/medical alarm from the Panel:**

Press and hold both emergency buttons at the same time, for at least 3 seconds.

*or--* Press both emergency buttons twice within 3 seconds.

*or--* Press COMMAND, then immediately press both emergency buttons at the same time.

The interior and exterior sirens and the Panel sound the appropriate alarm. Exterior sirens do not sound for auxiliary/medical alarms.

■ **To activate a police, fire, or auxiliary/medical alarm from a touchpad:**

Press and hold the appropriate emergency button, for at least 3 seconds.

The interior and exterior sirens and the Panel sound the appropriate alarm. Exterior sirens do not sound for auxiliary/medical alarms.

**Note:** The Handheld Touchpad only has a POLICE emergency button.

### ■ To activate an alarm from a Keychain Touchpad:

Press and hold the appropriate buttons until the light blinks. Simultaneously press arm and disarm for an alarm type set by your security consultant.

The interior and exterior sirens and the Panel sound the appropriate alarm. Exterior sirens do not sound for auxiliary/medical alarms.

### ■ To cancel a police, fire, or auxiliary/medical alarm:

Enter ACCESS CODE + 1 from the Panel or a touchpad. Sirens are silenced, and the Panel announces, *Sensor [sensor #] [alarm type] Alarm memory, Alarm system is off.* See Table 4 for the appropriate sensor number.

## SILENT DURESS ALARM

If you are in a life-threatening situation (for example, if you enter the premises and find an intruder inside), you can enter the duress code instead of an access code while arming or disarming the system. The duress code causes the Panel to send a silent duress alarm to the monitoring service. This notifies the monitoring service of a potentially life-threatening situation, but no alarms sound at the premises.

**Note:** If you do not have a monitoring service for your system, you cannot use the silent duress alarm feature.

The first two digits of your duress code are the same as the first two digits of your primary access code. The last two digits can only be changed by your security consultant or monitoring service.

### ■ To activate a silent duress alarm:

Enter DURESS CODE + [1, 2, or 3].

The Panel and interior sirens sound the appropriate number of arming level beeps for the level you selected, and the Panel announces, *Alarm system is [off or on level #].* The system immediately reports the duress alarm to the monitoring service.

**Note:** Silent duress alarms cannot be canceled.





# SECTION 4— ADVANCED SYSTEM OPERATIONS

This section describes how to perform the more advanced system operations, including: arming with no alarm delay, bypassing normally armed sensors, and using the chime feature controlling lights.

## ARMING WITH NO ALARM DELAY (NO DELAY)

### 4

NO DELAY

The No Delay feature is used when you want an alarm to sound immediately when a sensor is activated, if the system is armed to level 2 or 3 and if the sensor is normally delayed in that level. No Delay makes all normally delayed sensors instant for that arming period.

You might choose to use No Delay in a home when all family members are in for the night and you are ready to arm the system to level 2. If an intruder opens a delay door an instant alarm occurs. You can also use No Delay if you are outside the premises, have a touchpad, and are leaving.

#### ■ To arm the system with no alarm delay time:

1. Close all perimeter doors and windows.
2. Check to see that the READY light is on or flashing at the Panel.
3. Enter ACCESS CODE + [2 or 3] + 4.

*or--* Press COMMAND + [2 or 3] + 4, if your system is set up for this capability.

The red STAY or AWAY light on the Panel turns on, the Panel and interior sirens sound arming level beeps, and the Panel announces, *Alarm system is on [level two or three]*. The NO DELAY light on the Panel turns on, and the Panel announces, *No delay*.

**Note:** Disarm the system before opening a perimeter door or window, or an accidental alarm may occur.

# BYPASSING NORMALLY ARMED SENSORS (BYPASS)

## BYPASS

Use the Bypass feature to ignore selected sensors, so they can remain open or so they can be opened and closed without sending an alarm. Bypassing a window sensor allows you to leave the window open while the system is armed. Bypass also allows you to ignore a sensor that is not working properly and is causing unwanted alarms. You can bypass all sensors for any security level in which they are active, except smoke, heat, and fire pull sensors. Bypassed sensors remain bypassed until you change security levels.

You can bypass sensors indirectly or directly. Indirect bypassing lets you bypass open sensors when the system will not arm. Direct Bypass lets you bypass sensors when the system is armed and operating normally.

### ■ To bypass sensors indirectly:

1. Arm the system. If the Panel announces, *Sensor [sensor #] open* and sounds protest beeps, continue to step 2.

If the panel arms successfully, you do not have to bypass any sensors.

2. Press BYPASS.

The Panel announces, *Alarm system is on [level #]. Sensor [sensor #] bypassed.*

**Note:** The indirect bypass procedure shall not be used in UL listed installations.

**Note:** The indirect bypass procedure does not work when you arm the Panel by pressing the COMMAND button rather than entering your access code.

### ■ To bypass sensors indirectly from a Keychain Touchpad:

1. Press arm. If the Panel announces, *Sensor [sensor #] open* and sounds protest beeps, continue to step 2.

If the Panel arms successfully, you do not have to bypass any sensors.

2. Press arm again.

Depending on which level you arm to, the Panel's STAY or AWAY light turns on, the Panel and interior sirens sound arming level beeps, and the Panel announces, *Sensor [sensor #] bypassed.*

**Note:** The indirect bypass procedure shall not be used in UL listed installations.

### ■ To bypass sensors directly:

1. Enter primary ACCESS CODE + [2 or 3], to arm the system to the desired level.
2. Enter primary ACCESS CODE + BYPASS + [sensor #]. Sensor numbers range from 01 to 18.  
The Panel announces, *Sensor [sensor #] bypassed.*
3. Repeat step 2 to bypass another sensor.

**Note:** You cannot bypass fire sensors, which include smoke, heat, and fire pull sensors. But you can bypass 24-hour police and auxiliary/medical sensors, including sensors in level 1 (see Table 4 for sensor numbers).

### ■ To remove all sensor bypasses:

Change the security level.

### ■ To remove a single sensor bypass:

1. Enter primary ACCESS CODE + BYPASS + [sensor #].  
The Panel announces, *Sensor [sensor #] On.*  
If the Panel announces, *Invalid, try again*, check that the sensor is closed, then repeat step 1.
2. Repeat step 1 to remove another sensor bypass.

## USING THE CHIME FEATURE (CHIME)

### 7

#### CHIME

The Chime feature causes the system to sound chime beeps whenever a monitored perimeter door or window is opened. Chime only works in level 1, when the system is disarmed.

### ■ To turn Chime on or off:

1. Enter ACCESS CODE + 1 from the Panel or a touchpad to disarm the system.
2. Enter ACCESS CODE + 7.

*or--* Enter COMMAND + 7.

The Panel announces, *On* or *Off*.

# CONTROLLING LIGHTS (LIGHTS)



LIGHTS

X-10 Lamp Modules allow your system to turn lights on and off. X-10 Lamp Modules can control any incandescent lights that plug into an outlet.

## PANEL LIGHT CONTROL

The Panel instructs the X-10 Lamp Module to control lights as follows:

- During a fire alarm, lights turn on and remain on until the security level changes or until 12 hours with no system status change.
- During an intrusion alarm, lights flash until the siren time-out ends, then they remain on steady for up to 12 hours with no system status change.
- During entry and exit delay time, lights turn on and remain on for 5 minutes.

**Note:** If the system is disarmed during any of the above scenarios, lights controlled by X-10 Lamp Modules turn on steady and remain on for an additional 5 minutes.

## USER LIGHT CONTROL

Lights controlled by an X-10 Lamp Module can be turned on or off with the system in any security level.

- **To turn controlled lights on or off:**

Enter ACCESS CODE + 0, with the Panel in any security level.

*or--* Enter COMMAND + 0 from the Panel or a touchpad.

The Panel announces, *On* or *Off*.

# CHECKING THE SYSTEM STATUS (STATUS)

## STATUS

Whenever you disarm the system or experience system problems, check the system's status. The Panel may notify you of the following conditions:

- Sensors that are open or have covers off
- Sensors with low batteries
- Sensors that are bypassed
- Condition of AC power
- Condition of backup batteries
- Sensor alarms that occurred during the arming period
- Sensors experiencing communication failure

### ■ To check system status:

Press STATUS.

The Panel and interior sirens sound the appropriate number of arming level beeps for the current security level, and the Panel announces the status of the system.

**Note:** If a sensor is open, the system announces the open sensor number instead of announcing the complete system status. The status of the system battery and AC power are announced only if there is a failure.

Table 5 shows a few system status messages that may be announced.

**Table 5. Status Voice Messages and Their Meanings**

Voice Message	Meaning
<i>Hello, alarm system is off, system battery is OK, AC power is OK, good-bye.</i>	All sensors are closed, no system problems exist, and system is in level 1.
<i>Hello, alarm system is off, sensor [sensor #] open.</i>	A perimeter sensor is open. Close or bypass sensor to arm system.
<i>Hello, alarm system is off, sensor [sensor #] low battery.</i>	A sensor has a low battery. Contact your security consultant for sensor battery replacement.
<i>Hello, alarm system is on level 3, sensor [sensor #] bypassed.</i>	All sensors are armed except for sensor announced.
<i>Hello, alarm system is off, sensor [sensor #] trouble.</i>	Sensor cover is off. Put sensor cover on, then activate the sensor. For example, on a motion sensor, walk through its range of coverage.
<i>Invalid, try again.</i>	An incorrect or incomplete command was entered at the Panel or from a touchpad.
<i>Hello, alarm system is off, sensor [sensor #] failure.</i>	A sensor isn't working. Contact your security consultant.

## CHECKING FOR ALARMS

The Panel saves a record of any alarms that occurred while the system was armed. Use the following procedures to review any alarm messages stored in memory and clear the alarm memory when you no longer need the alarm messages.

### ■ To hear alarms in Panel memory:

Enter COMMAND + STATUS.

The Panel announces, *Sensor [sensor #] [alarm type] Alarm Memory*. If no alarms occurred during the arming period, the Panel announces, *Alarm Memory is OK*.

### ■ To clear alarm memory:

1. Enter any ACCESS CODE + 9.

The Panel and interior sirens sound one long beep and the Panel announces, *Sensor test is on*.

2. Enter any ACCESS CODE + 1 to exit out of sensor test.

The Panel announces, *Alarm system is off*. The alarm memory is now empty.

# ADJUSTING PANEL SPEAKER VOLUME

The Panel has eight volume levels to choose from. Alarm sounds and alarm messages are always at full volume.

## ■ To adjust Panel speaker volume:

Press COMMAND and hold until the desired volume is heard.

The Panel announces, *Hello...hello...hello...* with a steadily decreasing volume, then returns to full volume and starts decreasing volume again.





# SECTION 5-

## MAINTAINING YOUR SYSTEM

Follow these maintenance procedures to help keep your system reliable and trouble-free.

### REQUIRED SYSTEM TESTS

It is important that you check the system status and perform phone and sensor tests weekly. These procedures ensure that your system is fully operational.

■ **To check system status:**

With all sensors in their normally secure position, press STATUS.

The Panel and interior sirens sound arming level beeps, corresponding to the current arming level. The Panel announces system status, as shown in Table 6.

**Note:** If a sensor is open, the system announces only the open sensor number. The status of the backup battery and AC power are announced only if there is a problem.

**Table 6.** Voice Status Messages

Main Message	Status	Level
<i>Hello</i>	—	—
<i>Alarm System is</i>	<i>OFF</i>	—
	<i>ON</i>	<i>Level 2</i>
	<i>ON</i>	<i>Level 3</i>
<i>System Battery</i>	<i>is OK.</i>	—
	<i>Failure †</i>	—
<i>AC Power</i>	<i>is OK.</i>	—
	<i>Failure ‡</i>	—
<i>Goodbye</i>	—	—

† See "Replacing Panel Backup Batteries."

‡ Check if the AC power transformer is plugged in. Check the circuit breaker or fuse controlling the outlet. If you still don't have AC power, contact your security consultant.

## ■ To perform a phone test:

**Note:** Performing a phone test is only necessary if your security system is monitored by a monitoring service.

Enter ACCESS CODE + 8.

The Panel and interior sirens sound one long beep, and the Panel announces, *Phone test is on.*

The system returns to level 1 when the phone test is complete. The Panel announces, *Phone test is OK, Alarm system is OFF.*

If the Panel announces, *Phone test failure, Alarm system is OFF,* make sure the Panel is plugged into the phone jack. If a problem still exists, contact your security consultant immediately.

## ■ To perform a sensor test:

1. Enter ACCESS CODE + 9.

The Panel and interior sirens sound one long beep, and the Panel announces, *Sensor test is on.* You have 15 minutes to complete the sensor test.

2. Activate each sensor, as described in Table 7.

The Panel and interior sirens sound several beeps, and the Panel announces, *Sensor [sensor #] OK.*

3. Press STATUS when you think all sensors have been tested.

The Panel announces, *All sensors test OK.* If all sensors have not been tested, the Panel announces a list of all untested sensors. Test all untested sensors.

4. If you need more time to complete the sensor test, enter ACCESS CODE + 9.

This gives you 15 minutes to complete the sensor test, and you don't have to retest any sensors.

5. Enter ACCESS CODE + 1 to exit the sensor test at any time.

or--The Panel goes to level 1 after 15-minutes in sensor test, if you do not exit first.

The Panel announces, *Alarm system is off.*

**Note:** Performing a sensor test also clears the Panel's alarm history (see "Checking for Alarms").

**Table 7. How to Activate Sensors During Sensor Test**

Sensor ‡	Action
Door/Window	Open the secured door or window, and reclose it after the beeps.
Freeze	Apply ice or freeze spray to the sensor for about 45 seconds. Do not let the sensor get wet.
Glass Guard	†
Motion Sensor	Avoid sensor's view for 5 minutes, then enter its view.
Emergency Buttons on Touchpads and Panel	Press and hold the appropriate emergency button(s) for at least 3 seconds. Test all three emergency buttons (POLICE, FIRE, AUXILIARY).
Rate-of-Rise	Rub your hands together until warm, then place one hand on the sensor for 30 seconds.
Shock	†
Smoke	Press and hold the test button until the system sounds transmission beeps.
Sound	†

† You cannot test this sensor. Your security consultant should test the sensor periodically.

‡ Your security consultant can explain how to test any additional sensors used with your system.

## REPLACING PANEL BACKUP BATTERIES

Your Panel uses six NiCd or alkaline backup batteries, if an AC power failure occurs. The actual length of time the Panel will operate on backup batteries depends on your backup power time setting, the type of batteries used, and the condition of the batteries. The default setting for backup power is 5 hours and may be changed by your security consultant.

Test your backup batteries weekly by checking the system status, as described in the previous section, "Required System Tests." If the Panel announces, *System Battery Failure*, when you check system status, replace your batteries.

**CAUTION:** The Panel may be damaged if the wrong batteries are installed. Make sure the batteries are all the same type and part number.


**Note:** Use only the following batteries:

**Alkaline--** Eveready E91, Duracell MN1500, Panasonic AM3X

**NiCd--** Panasonic P-70 AAS or P-60AA, Sanyo N-600-AA

■ **To replace the Panel's backup batteries:**


1. Enter ACCESS CODE + 1 to disarm the system to level 1. An alarm occurs if you do not disarm the system.
2. Loosen the two screws on the bottom of the Panel until you are able to slide the door down and out (see Figure 3). Two full turns should be enough to allow you to remove the battery door without removing the screws completely.

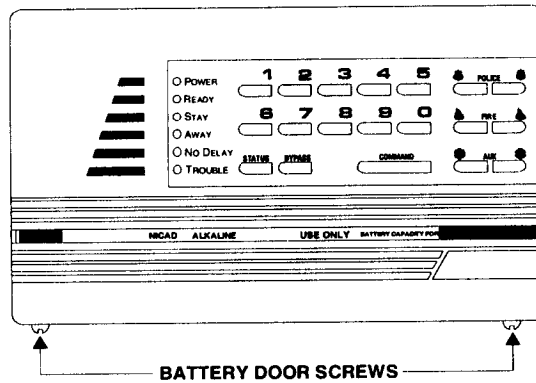

**Figure 3.** Loosen the two battery door screws


3. Check the battery type installed (NiCd or alkaline). You must use the same battery type that is currently installed (see Figure 4).

**CAUTION:** To avoid the risk of personal injury, equipment damage, and battery failure, only install the battery type that the tab indicates.

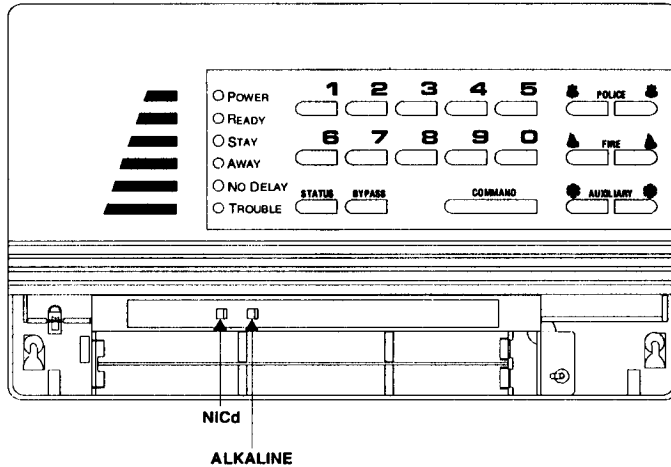

**Figure 4.** Tab Indicates Battery Type Installed

4. Remove the batteries from the battery bucket.
5. Insert appropriate new batteries in the order and direction shown in Figure 5.

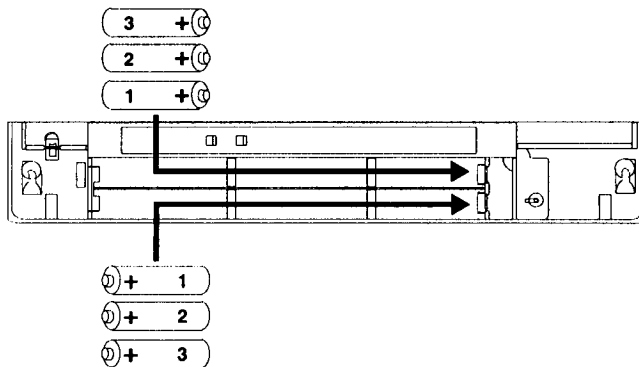

**Figure 5.** Battery Polarity and Order of Installation

6. Replace the battery door on the Panel.
7. Wait 30 seconds, then press STATUS.

The Panel should announce, *Hello, alarm system is off, system battery is OK, AC power is OK, good-bye.* If the Panel announces, *Hello, alarm system is off, system battery failure,* check the battery installation. If the batteries are installed correctly, contact your security consultant.

**Note:** If NiCd batteries are not fully charged, it may take up to 24 hours for the system to fully recharge the batteries and clear the low battery warning. During this time, the system is fully operational unless an AC power failure occurs.

## REPLACING SMOKE SENSOR BATTERIES

The Smoke Sensor has two 9-volt batteries. Use only Eveready Alkaline Energizer<sup>®</sup> 522, Duracell MN 1604, or Ultralife<sup>®</sup> U 9VL Lithium 9-volt batteries. Replace the batteries in Smoke Sensors once a year.

### ■ To replace the batteries in a Smoke Sensor:

1. Remove the sensor from its base by turning the sensor counterclockwise, until the line on the sensor aligns with the line on the base. Then, pull the sensor off the base.
2. Pull the batteries out of their compartments, and disconnect the batteries from the battery clips.
3. Connect the new batteries to the battery clips, and push the batteries into their compartments.
4. To attach the sensor to the base, put the sensor on the base, then align the line on the sensor with the line on the base. Turn the sensor clockwise until the sensor locks on the base (about 1/4 turn).
5. Perform a sensor test on the Smoke Sensor to verify that the batteries are okay. See "Required System Tests" in this section to perform a sensor test.

## REPLACING OTHER SENSOR BATTERIES

While you can replace the batteries in the Panel and in the Smoke Sensor, you must contact your security consultant to replace the batteries in all other sensors and the touchpad. These devices use lithium batteries not available in retail stores.



# SECTION 6-

## TROUBLESHOOTING YOUR SYSTEM

Table 8 provides basic troubleshooting information.

**Table 8. Troubleshooting Your System**

Problem	Solution
<p><b>Access Code</b></p> <p>Cannot remember access code.</p>	<p>Contact your security consultant.</p>
<p><b>Arming/Disarming</b></p> <p>System won't arm.</p>	<ul style="list-style-type: none"> <li>• If arming to level 2, make sure all monitored perimeter doors and windows are closed.</li> <li>• If arming to level 3, make sure all perimeter and interior sensors are closed.</li> <li>• Press STATUS for a voice message of the problem.</li> <li>• If system still won't arm, contact your security consultant.</li> </ul>
<p><b>Batteries</b></p> <p>Panel announces, <i>System Battery Failure</i>.</p> <p>Panel announces, <i>Sensor [sensor #] low battery</i>.</p>	<p>Replace Panel backup batteries as described in the "Replacing Panel Backup Batteries" section.</p> <p>See "Replacing Smoke Sensor Batteries" for the procedure to replace your own smoke sensor batteries, or contact your security consultant to have your other sensor batteries replaced.</p>
<p><b>Bypass</b></p> <p>Panel announces, <i>Invalid, try again</i> when you attempt to bypass a sensor.</p> <p>System cancels sensor bypass when you try to arm to level 2 or 3.</p>	<p>You are trying to bypass a 24-hour sensor that cannot be bypassed or a sensor that is not active in the current security level. You don't need to bypass this sensor.</p> <p>Arm to the desired level before you try bypassing a sensor.</p>
<p><b>False Alarm</b></p> <p>Alarm is being sent.</p>	<p>Enter ACCESS CODE + 1 to cancel the alarm. This command bypasses the alarm if done within 8 to 20 seconds.</p>



**Table 8. Troubleshooting Your System (Continued)**

Problem	Solution
<p><b>Lights</b></p> <p>Light using X-10 Lamp Module doesn't work.</p>	<ul style="list-style-type: none"> <li>• Check light bulbs.</li> <li>• Check that light switch on lamp is turned ON.</li> <li>• Make sure lamp is plugged into an X-10 Lamp Module.</li> <li>• Make sure the lamp is plugged into a nonswitched outlet.</li> <li>• If light control still doesn't work, contact your security consultant.</li> </ul>
<p><b>Panel</b></p> <p>All panel lights flash. Trouble beeps sound.</p> <p>All panel lights are on steady. Trouble beeps sound.</p>	<p>The system is in programming mode. Contact your security consultant.</p> <p>The system's memory is clear. Contact your security consultant.</p>
<p><b>Power</b></p> <p>Panel announces, <i>AC Power Failure</i>.</p>	<p>Check to see if AC transformer is plugged into an outlet. If it is, check circuit breaker or fuse that controls that outlet. If there is still an AC power failure, contact your security consultant.</p>
<p><b>Sensor</b></p> <p>Panel announces, <i>Sensor [sensor #] Trouble</i>.</p> <p>Panel announces, <i>Sensor [sensor #] Failure</i>.</p> <p>Panel announces, <i>Sensor [sensor #] low battery</i>.</p>	<p>Put the sensor's cover on, if it is off. Activate the sensor.</p> <p>The sensor is not communicating with the Panel. Contact your security consultant.</p> <p>See "Replacing Smoke Sensor Batteries" for the procedure to replace your own smoke sensor batteries, or contact your security consultant to have other sensor batteries replaced.</p>

**Table 8. Troubleshooting Your System (Continued)**

<b>Problem</b>	<b>Solution</b>
<b>Smoke Sensor</b> Beeps once every minute.	Batteries are low. Replace the smoke sensor batteries.
<b>Telephone</b> Telephone doesn't work.	Disconnect Panel from phone jack. If the phone works, contact your security consultant. If phone still doesn't work, the system is OK; contact your phone company.
<b>Trouble Beeps (see also <i>Panel</i>)</b> Six beeps occur every minute.	Press <b>STATUS</b> for a voice message of the problem. This disables the trouble beeps until the Panel calls in its daily report. Contact your security consultant.
<b>Wireless Interior Siren (WIS)</b> Beeps once every minute	Battery is low. Replace the WIS' s battery.

b

# SECTION 7-


## PLANNING FOR EMERGENCIES

To protect yourself and others on the premises, create a map of the premises. Develop a plan for various emergencies, and practice your emergency plans. Figure 6 is an example of a floor plan. Draw a floor plan of your premises in Figure 7. Include the location of all system components. Be sure to show exits from each room (two exits per room are recommended).



Periodically discuss emergency procedures that include the following points:

- Understanding how to use the security system.
- Knowing the normal state of premises doors and windows, either open, closed or locked.
- Using alternate escape routes if closed doors feel hot to the touch.
- Crawling and holding breath.
- Escaping fast! (Do not stop to pack.)
- Meeting at a designated outdoor location.
- Conducting periodic rehearsals.
- Emphasizing that no one should return to the premises if there is a fire.
- Emphasizing that no one should enter the premises if they hear siren sounds.


**CAUTION:** If you arrive at the premises and hear sirens, **DO NOT ENTER** the premises. Call for emergency assistance from a neighbor's phone.

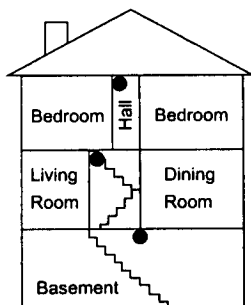

**A SMOKE DETECTOR SHOULD BE LOCATED ON EACH LEVEL.**

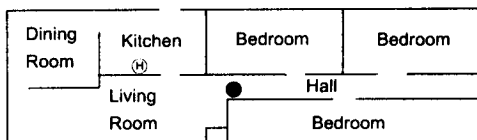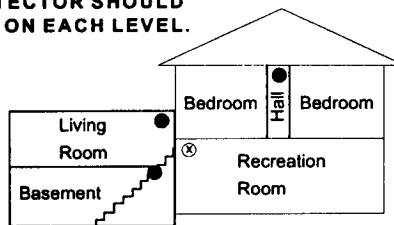

**SMOKE DETECTORS SHOULD BE LOCATED BETWEEN THE SLEEPING AREA AND THE REST OF THE FAMILY LIVING UNIT.**

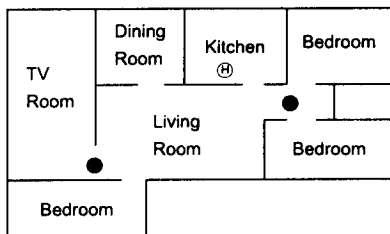

**IN FAMILY LIVING UNITS WITH MORE THAN ONE SLEEPING AREA, A SMOKE DETECTOR SHOULD BE LOCATED AT EACH AREA.**

**NOTE: CEILING MOUNTED SMOKE DETECTORS SHOULD BE LOCATED IN THE CENTER OF THE ROOM OR HALL, OR NOT LESS THAN 4 INCHES FROM ANY WALL. WHEN THE DETECTOR IS MOUNTED ON A WALL, THE TOP OF THE DETECTOR SHOULD BE 4 TO 12 INCHES FROM THE CEILING.**

**NOTE: DO NOT INSTALL SMOKE DETECTORS WHERE NORMAL AMBIENT TEMPERATURES ARE ABOVE 100°F OR BELOW 40°F. ALSO, DO NOT LOCATE DETECTORS IN FRONT OF AC/HEAT REGISTERS OR OTHER LOCATIONS WHERE NORMAL AIR CIRCULATION WILL KEEP SMOKE FROM ENTERING THE DETECTOR.**

**NOTE: ADDITIONAL INFORMATION ON HOUSEHOLD FIRE WARNING IS AVAILABLE AT NOMINAL COST FROM: THE NATIONAL FIRE PROTECTION ASSOCIATION, BATTERYMARCH PARK, QUINCY, MA 02269. REQUEST STANDARD NO. NFPA74.**

● REQUIRED SMOKE DETECTOR

Ⓜ HEAT DETECTOR


⊗ INDICATES SMOKE DETECTOR IS OPTIONAL IF DOOR IS NOT PROVIDED BETWEEN BASEMENT AND RECREATION ROOMS

8333G04D.D84

**Figure 6. Floor Plan Example**


# FLOOR PLAN

Use the space provided (Figure 7) to draw your floor plan and indicate where all system components and sensors are located.

 

**Figure 7.** Draw a Floor Plan of the Premises





# APPENDIX A - ALARM SYSTEM NOTICE

## ALARM SYSTEM LIMITATIONS

Not even the most advanced alarm system can guarantee protection against burglary, fire, or environmental problems. All alarm systems are subject to possible compromise or failure-to-warn for a variety of reasons.

- If sirens are not placed within hearing range of persons sleeping or in remote parts of the premises, or if they are placed behind doors or other obstacles.
- If intruders gain access through unprotected points of entry or areas where sensors have been bypassed.
- If intruders have the technical means of bypassing, jamming, or disconnecting all or part of the system.
- If power to sensors is disconnected or inadequate.
- If freeze, flood, or any environmental sensors are not located in areas where the appropriate condition can be detected.
- If smoke does not reach a Smoke Sensor. For example, Smoke Sensors cannot detect smoke in chimneys, walls, roofs, or smoke blocked by a closed door. Sensors may not detect smoke on other levels of the building. Sensors may not warn in time when fires are caused by smoking in bed, explosions, improper storage of flammables, overloaded electrical circuits, or other hazardous conditions.
- If telephone lines are out of service. Telephone lines are also vulnerable to compromise by any of several means.

Inadequate maintenance is the most common cause of alarm failure. Therefore, test your system at least once per week to be sure sensors, sirens, and phone communications are all working correctly.

Although having an alarm system may make you eligible for reduced insurance premiums, the system is no substitute for insurance.

**WARNING:** Security devices cannot compensate you for loss of life or property.

## SERVICE

If you have any questions about your system or if you ever need service, please contact your security consultant.

Company Name \_\_\_\_\_

Phone Number \_\_\_\_\_

Address \_\_\_\_\_







# GLOSSARY

**access code**

A four-digit number that you must enter to operate the system.

**alarm**

A Panel condition that occurs when a sensor is tripped, if the sensor is active in the current arming level.

**arm**

To turn on intrusion detection. When arming to level 2, perimeter sensors, such as door/window sensors, are monitored. When arming to level 3, all sensors, including interior sensors such as motion sensors, are monitored. See also *disarm*.

**auxiliary/medical alarm**

Activated by pressing the AUXILIARY/MEDICAL buttons. Turns on interior sirens only and sends an alarm to your monitoring service.

**bypass**

Have the system ignore selected sensors while the system is armed. For example, to open a monitored door while the system is armed to level 2, bypass the door's sensor. You cannot bypass 24-hour fire sensors.

**central monitoring station**

See monitoring service.

**delay**

The time you have to enter the premises and disarm the system before an alarm occurs, or the time you have to exit the premises after arming the system before an alarm occurs.

**disarm**

To turn off intrusion detection (level 1). Only the 24-hour sensors remain on.

**duress code**

A four-digit code that can be used to disarm the system in an emergency, while it sends a silent alarm to the monitoring service.

**fire alarm**

Activated by a smoke, heat, or fire pull sensor or the FIRE buttons. Turns on interior and exterior sirens and sends an alarm to your monitoring service.

**interior sensors**

Sensors that monitor the interior of the premises for intruders. Examples of interior sensors: sound sensors, motion sensors, and door/window sensors on interior doors.

**intrusion alarm**

An alarm that is caused by activating a perimeter or interior sensor. For example, if the system is armed to level 3 and a motion sensor detects motion, an alarm occurs.

**intrusion detection**

Monitoring provided by perimeter and/or interior sensors. Intrusion detection does not include 24-hour sensors.

**Keychain Touchpad**

Miniature two-button wireless touchpads that control basic system functions normally performed from the Panel or a wireless touchpad. The built-in light blinks when the Keychain Touchpad has transmitted a signal.

**monitoring service**

The service your system calls to report various system conditions. The monitoring service dispatches the appropriate authorities in an emergency and provides some system programming services.

**perimeter sensors**

The sensors that monitor exterior doors and windows. Perimeter sensors include door/window and shock sensors.

**police alarm**

Activated by perimeter or interior sensors or the POLICE button. Turns on interior and exterior sirens and calls your monitoring service.

**silent alarm**

Activated by entering the duress code. No sirens are turned on, but the monitoring service is notified of the alarm.

**24-hour sensors**

Sensors that monitor the interior of the premises for threats that are not caused by intruders. Examples of 24-hour sensors: heat sensors, freeze sensors, and smoke sensors.



# INDEX

## A

- AC power
  - failure – 29
  - troubleshooting – 36
- access code
  - if you forget – 11, 35
  - primary
    - changing – 11
  - secondary
    - description of – 12
  - temporary
    - adding – 12
    - changing – 12
    - disabling – 12
  - troubleshooting – 35
- activating sensors
  - table of – 31
- alarm
  - auxiliary/medical
    - description of – 17
    - sound pattern – 8
  - cancel – 35
  - checking for – 25, 26
  - fire
    - description of – 17
    - sound pattern – 8
  - memory – 26
  - police
    - description of – 17
    - sound pattern – 8
  - sounds
    - description of – 8
- alarm sounds
  - table of – 8
- alarm system notice – 43
- arm
  - defined – 16
  - from Panel – 16, 17
  - from touchpad – 16, 17
  - security levels – 14
  - sensors active in level 2 – 14

- sensors active in level 3 – 14
  - troubleshooting – 35
  - unable to – 35
  - using COMMAND button – 16, 17
  - with No Delay – 21
  - with sensor bypass – 22
- arming level beeps
    - description of – 9
- AUXILIARY button
    - description of – 18
- auxiliary/medical alarm – 17
    - activating – 18
    - using COMMAND button – 18
- AWAY
    - button – 16
    - indicator light – 7

## B

- backup batteries
  - installing/replacing – 31, 32
    - figure of – 33
  - type indicator
    - figure of – 33
  - using the right type – 32
- backup battery
  - failure – 29, 35
- basic system operations
  - description of – 11
- batteries
  - lithium – 34
  - other sensor battery replacement – 34
  - replacing in smoke sensor – 34
  - see backup batteries
  - troubleshooting – 35
- battery
  - 9 volt – 34
- battery door screws
  - loosening
    - figure of – 32
- battery failure
  - voice message – 29
- beeps
  - arming level
    - description of – 9
  - chime
    - description of – 9

- entry delay
  - description of – 9
- protest
  - description of – 9
- table of – 9
- trouble
  - description of – 9
- troubleshooting – 37

- bypass
  - canceling – 22
  - defined – 22
  - direct – 22
  - feature
    - troubleshooting – 35
  - indirect – 22
- BYPASS button – 22

## C

- changing
  - primary access code – 11
  - temporary access code – 12
- checking
  - for alarms – 26
  - system status – 25, 29
- chime
  - defined – 23
  - turn off – 23
  - turn on – 23
  - using COMMAND button – 23
- chime beeps
  - description of – 9
- CHIME button – 23
- clearing alarm memory – 26
- code
  - secondary
    - description of – 12
  - temporary
    - adding – 12
    - changing – 12
    - disabling – 12
  - troubleshooting – 35
- COMMAND button
  - activating auxiliary/medical alarms – 18
  - arming to level 2 – 16, 17
  - arming to level 3 – 16, 17
  - turning lights on/off – 24

- communication system
  - description of – 7
- Control Panel, see Panel

## D

- delay
  - door – 12
  - extended – 13
  - standard – 13
- direct bypass
  - defined – 22
  - performing – 22
- disabling
  - temporary access code – 12
- disarm
  - defined – 14
  - from Panel – 14
  - from touchpad – 14
  - sensors active in level 1 – 14
  - to level 1 – 14
  - troubleshooting – 35
- duress code
  - activating a silent alarm – 19
  - canceling a silent alarm – 19
  - defined – 19

## E

- emergency
  - planning – 39
  - planning for – 39
- emergency alarm
  - activating – 18
  - auxiliary – 17
  - fire – 17
  - police – 17
  - silent – 17
  - using duress code – 17
- entering premises – 13
- entering/exiting the premises
  - description of – 12
- entry delay beeps
  - description of – 9

- escape plan
  - floor plan – 41
- exiting premises – 13
- extended delay – 13

## F

- failure
  - AC power – 29, 36
  - backup battery – 29
  - system battery – 35
- false alarm
  - stopping – 35
- fire alarm
  - activating – 18
  - description of – 17
  - sound – 8
  - using COMMAND button – 18
- FIRE button
  - description of – 18
- floor plan
  - escape plan – 41
  - typical figure of – 40

## I

- indicator light
  - all scrolling – 7
  - AWAY – 7
  - described – 7
  - flashing – 7
  - NO DELAY – 7
  - OFF – 7
  - ON – 7
  - POWER – 7
  - READY – 7
  - STAY – 7
  - table of – 7
  - TROUBLE – 7
  - troubleshooting – 36
- indirect bypass
  - cancel – 22
  - defined – 22

- performing – 22
- installing
  - backup batteries
    - figure of – 33
- introduction
  - how the system works – 1
- intrusion alarm
  - X-10 Lamp Module lights – 24

## L

- lamp modules
  - see lights
- level 1
  - defined – 14
  - disarm to – 14
  - sensors active in – 14
- level 2
  - arm to – 16, 17
  - defined – 16
  - sensors active in – 14
- level 3
  - arm to – 16, 17
  - defined – 16
  - sensors active in – 14
- lights
  - controlling – 24
  - controlling with X-10 Lamp Module – 24
  - see also indicator lights
  - table of – 7
  - troubleshooting – 36
  - using COMMAND button – 24
- LIGHTS button – 24
- locating sensors
  - typical figure of – 40

## M

- maintaining
  - system
    - description of – 29

messages  
    voice  
        defined – 9  
monitoring service – 4, 17, 19

## N

No Delay  
    button – 21  
    defined – 21  
    indicator light – 7  
notice  
    alarm system – 43

## O

OFF button – 14  
operating  
    system – 11, 21  
operation  
    basic system  
        description of – 11  
overview – 1

## P

Panel  
    alarm sounds – 8  
    beeps – 9  
    functions – 4  
    indicator lights  
        table of – 7  
    operation – 11, 21  
    speaker  
        adjusting volume – 27  
    testing – 29  
    troubleshooting – 36  
    voice messages  
        description of – 9  
phone  
    test – 30  
    troubleshooting – 37

phone test – 30  
planning  
    for emergencies – 39  
police alarm  
    activating from a Touchpad – 18, 19  
    activating from the Panel – 18  
    description of – 17  
    sound – 8  
    using COMMAND button – 18

POLICE button  
    description of – 18

POWER  
    indicator light – 7

power  
    troubleshooting – 36

premises  
    entering – 13  
    entering/exiting  
        description of – 12  
    exiting – 13  
    floor plan – 41

primary access code  
    changing – 11  
    if you forget – 11

problems  
    table of – 35

protest beeps  
    description of – 9

## R

READY  
    indicator light – 7

removing  
    battery door  
        figure of – 32

replacing  
    backup batteries – 32  
        figure of – 33  
    other sensor batteries – 34  
    smoke sensor batteries – 34

required system tests – 29

## S

secondary access code

- adding – 12
- changing – 12
- description of – 12

sensor

- activation during test
  - table of – 31
- alarm memory – 26
- batteries – 34
- bypass – 25
- bypassing – 22
- cover off – 25
- failure
  - troubleshooting – 36
- ignoring – 22
- locations
  - figure of typical – 40
- low battery – 25
- number
  - AUXILIARY button – 18
  - FIRE button – 18
  - POLICE button – 18
- open – 25
- status – 25
- test – 30
- trouble
  - troubleshooting – 36
- wireless – 5
- 24-hour – 14, 16, 18

sensor low battery  
troubleshooting – 36

sensor test

- activating sensors
  - table of – 31

silent alarm

- activating – 19
- canceling – 19
- defined – 19

siren

- description of – 5

siren sounds  
table of – 8

Smoke Sensor

- replacing batteries – 34
- troubleshooting – 37

solutions

- table of – 35

sounds

- alarm – 8
- auxiliary/medical alarm – 8, 17
- beeps – 37
- fire alarm – 8
- police alarm – 8
- siren – 8

speaker

- adjusting volume – 27

standard delay – 13

status

- alarm memory – 26
- beeps
  - table of – 9
- checking – 25
- checking after disarming – 14
- checking system – 29
- of AC power – 25
- of alarms – 25
- of backup batteries – 25
- of sensor batteries – 25
- of sensors – 25
- of system – 25, 29
- voice messages – 26

STATUS button – 25, 29

status messages

- table of – 29

STAY

- button – 16
- indicator light – 7

supervised

- defined – 1

system

- beeps – 9
- communication
  - description of – 7



- components – 1
- maintaining – 29
- status test – 29
- testing – 29
- system battery failure – 29
- system components
  - figure of – 2
- system operations
  - basic
    - description of – 11
- system overview
  - how the system works – 1
- system status
  - checking – 29
- system status beeps
  - table of – 9
- system tests
  - description of – 29

## T

- telephone
  - troubleshooting – 37
- temporary access code
  - description of – 12
- test
  - phone – 30
  - sensor – 30
  - system status – 29
- TROUBLE
  - indicator light – 7
- trouble beeps
  - description of – 9
  - troubleshooting – 37
- troubleshooting
  - table of – 35
- typical system
  - components – 1
  - figure of – 2

## U

- using
  - access codes – 11

## V

- voice messages
  - adjusting Panel volume of – 27
  - alarm memory – 26
  - defined – 9
  - for system status – 26
  - table of – 29
- volume
  - adjusting speaker – 27

## W

- wireless
  - defined – 1
- Wireless Interior Siren
  - troubleshooting – 37
- wireless sensor
  - defined – 5
- wireless touchpads
  - defined – 5

## X

- X-10 Lamp Module
  - defined – 24
  - see lights
  - system control – 24
  - user control – 24

## NUMERICS

- 24-hour sensors – 14, 16, 18